

Please keep these instructions carefully

**SUITABLE FOR USE WITH
ELECTRONIC LOW ENERGY BULBS**



DUSK TO DAWN WITH RANDOM SECURITY LAMP HOLDER



HOW TO FIT

1. Make sure the lamp is switched OFF, then carefully remove the bulb and the lampshade from the bayonet fitting.
2. Insert security lamp holder into the existing bayonet fitting.
3. Fit shade to security lamp holder, taking care not to overtighten the screw ring, then fit the bulb to the bayonet connector on the security lamp holder. Ensure that the bulb does not exceed the permissible wattage (see warning below).
4. Can be used with ceiling pendant lamps as well as table/standard lamps.
5. For internal use only.

HOW TO OPERATE IN NORMAL MODE

After fitting, the lamp may be turned ON and OFF in normal mode as required by using the light switch.

HOW TO OPERATE IN SECURITY MODE

Ensure that the light switch has been on for at least 2 seconds then turn the light switch OFF for between 1/2 and 1 second then back ON again. The lamp under control will respond with a single flash if count down mode is selected or if random mode is selected the response is two flashes. If the mode selected is not correct then repeat the ON-OFF-ON switching sequence and correct mode will be chosen.

Count down mode: Turns ON at dusk, staying ON for time selected by the switch on the security lamp holder (either 3, 6, 9 or 12 hours approximately)

Random mode: Carries out a random ON/OFF switching pattern between dusk and dawn.

If the OFF time in the ON-OFF-ON sequence is less than 1/2 second the security lamp holder will remain in its previous condition. If the OFF time is in excess of 1 second the security lamp holder will revert to manual mode and the lamp will be turned ON.

IMPORTANT: If you want to select RANDOM mode after the PSL07 has been operating in NORMAL mode your first ON-OFF-ON switching sequence will select COUNTDOWN mode. A second OFF and ON switching sequence is then required to select RANDOM mode.

RETURNING TO NORMAL MODE

Turn the light switch OFF for at least 2 seconds and then back ON again. The lamp will turn ON and stay ON. Switch OFF if required.

DO NOT USE

- The unit in an enclosed fitting such as a flush ceiling luminaire.
- Where a dimmer switch is connected or with fluorescent strip lights, halogen lights or with flicker style candlelight bulbs.

WARNING

Max. 60 watt bulb if used in CLOSED SHADE.

Definition of a Closed Shade = ▲ Shade open at one end only and generally mounted directly on lamp holder.

Max. 100 watt bulb if used in OPEN SHADE.

Definition of an Open Shade = △ Shade open at both ends and generally mounted on the lamp holder via a wire frame.


Electronic Energy Saving bulbs up to 20W can be used with either OPEN or CLOSED shades.

NOTE! The unit could become activated during daylight hours, for instance if the sky becomes overcast. However, it is able to check the light levels and will automatically reset itself once the light levels return to normal.

Helpline 020 8450 0515

Call now for a free range brochure on

020 8452 1112

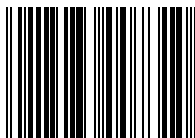

5 012483 007310 >

For further information contact:
Timeguard Ltd.,
Victory Park, 400
Edgware Road,
London NW2 6ND
Or visit our website
www.timeguard.com

This unit takes bayonet fitting Electronic Energy Saving bulbs

Min: 9W to Max: 20W
220-240V AC 50Hz
and normal bayonet fitting incandescent bulbs

Min: 40W to Max: 100W
220-240V AC 50Hz

INTERNAL USE ONLY

Conforms to Directives
73/23/EEC & 89/336/EEC



THREE YEAR

3

GUARANTEE

Model PSL07