

**TIMEGUARD®**

## Digital Time Switch

Model: NTT06

24 Hour General Purpose

Digital Timer

Model: NTT07

7 Day General Purpose

Digital Timer



Installation & Operating Instructions

## 1. General Information

These instructions should be read carefully and retained for further reference and maintenance.

## 2. Safety

- Before installation or maintenance, ensure the mains supply to the time switch is switched off and the circuit supply fuses are removed or the circuit breaker turned off.
- It is recommended that a qualified electrician is consulted or used for the installation of this time switch and install in accordance with the current IEE wiring and Building Regulations.
- Check that the total load on the circuit including when this time switch is fitted does not exceed the rating of the circuit cable, fuse or circuit breaker.


## 3. Technical Specifications

- 230V AC 50 Hz
- This time switch is of class I construction and must be earthed
- Switch Rating: 16A Resistive (3.68kW)  
Immersion Heaters  
2400W incandescent  
and halogen lighting  
750W fluorescent  
lighting  
100W Compact  
fluorescent & LED lighting

The LED switching capabilities of this product can be increased to 200W by the addition of the Timeguard ZV900 Automatic switch load controller – sold separately.

- Switch Type: 16A relay
- Voltage free contact if wire link is removed
- Contact Type: Normally Open and Normally Closed
- Manual Override: Permanent ON or OFF
- Boost Times: 1 or 2 hour
- Power Status LED Indicator: Red
- Output LED Indicator: Green
- NTT06: 24 Hour Time Period, Up to 48 programmes per day
- NTT07: 7 Day Time Period (7 Day, 5 + 2 Days or Individual Day), 4 ON/OFF switching programmes per day
- Operating Temperature: 0°C to +40°C
- CE Approved

**Note: Not suitable for use with Discharge Lighting.**

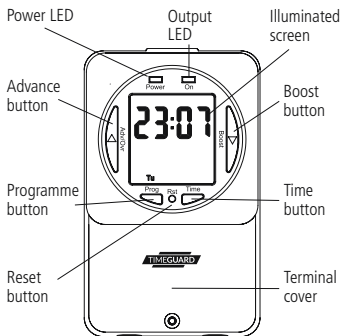

## 4. Installation


- Ensure the mains supply is switched off and the circuit supply fuses are removed or the circuit breaker turned off.
- Remove the terminal cover by undoing the fixing screw on the bottom of the time switch.
- Mark the position of the top wall mounting screw. Drill out the top mounting hole taking care to avoid any joists, electrical cables or water/gas pipes that may be hidden beneath the surface. Insert the rawl plug into the hole.
- Fix the top mounting screw and leave 2.5mm proud off of the wall.
- Place the key hole in the top of the product, over the screw head, and slide down.
- Mark the position of the lower mounting hole on the wall using the wall plate as a template.

# 4

- Remove the product and drill out the lower mounting hole again taking care to avoid any joists, electrical cables or water/gas pipes that may be hidden beneath the surface. Insert the rawl plug into the hole.
- The 230V 50Hz supply and load cables can enter through the rear knock outs or the front cable entry ports provided. If the rear knock outs are being used, remove the blanking plates and pass the supply and load cables through the holes.
- Place the key hole in the top of the product again, over the screw head, and slide down.
- Secure the unit to the wall using the lower mounting screw.
- If the wiring is through the front cable entry ports, use the cable clamps provided to secure the supply and load cables.
- Terminate the supply and load cables to the terminal block ensuring correct polarity is observed and that all bare conductors are sleeved. Please note the connections are marked beneath the terminal block (see section 5. Connection Diagram).
- Secure the terminal cover back into place using the fixing screw.


## 5. Connection Diagram

- The terminals are marked as follows on the bottom of the wall plate;
- ### 230V Mains Voltage Switching

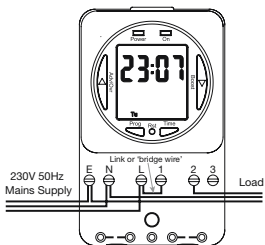


5

### 230V 50Hz Mains Supply


Live (Brown or Red) to	<b>L</b>
Neutral (Blue or Black) to	<b>N</b>
Earth (Green/Yellow) to	

### Load

Switch Live (Brown or Red) to either; Normally OPEN to mains voltage appliance e.g. Immersion Heater	<b>2</b>
Normally CLOSED to mains voltage appliance e.g. Fan	<b>3</b>
Leave the 'Link' or 'Bridge' wire between	<b>L &amp; 1</b>
Neutral (Blue or Black) to	<b>N</b>
Earth (Green/Yellow) to	

Note: this device needs to be left to charge for a minimum of 15 minutes once powered up, before it will operate.

## Voltage Free Switching – e.g. 24V circuit

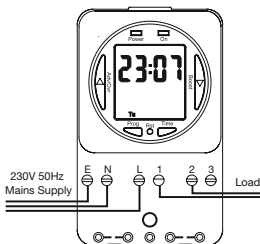

### 230V 50Hz Mains Supply

Live (Brown or Red) to

**L**

Neutral (Blue or Black) to

**N**

Earth (Green/Yellow) to



### Load

Remove the 'Link' or 'Bridge'  
from between

**L & 1**

Live input (for voltage free output) to

**1**

Switch Live (for low voltage  
appliance) to either;

Normally OPEN to mains voltage  
appliance e.g. Immersion Heater

**2**

Normally CLOSED to mains voltage  
appliance e.g. Fan

**3**

Note: this device needs to be left to charge for a minimum of 15 minutes once powered up, before it will operate.

## 6. Battery

- The time switch has a factory fitted rechargeable battery to give clock operation and programme memory back up during loss of mains supply.
- Before programming for the first time, connect the unit to the mains for at least 15 minutes prior to pressing the Rst button and programming the unit.
- If the display is not visible or very faint, charge for 4 hours prior to pressing Rst and programming.
- Approximately 720 hour battery reserve.

## 7. Reset

The time switch must be reset before programming for the first time, or after subsequent discharge for more than 5 days, and following a 4 hour period of charging.

- Press the Rst button once using a pointed object e.g. a pencil or a paper clip.
- The display will show all characters/digits and then will clear to show the following;  
ASCO = Automatic Summer/  
Winter Change Over.
- Use the Adv/Ovr button to change between ON and OFF for the automatic summer time adjustment and proceed to section 9.



## 8. Setting the clock

- Press and hold the Time button for 3 seconds, the word Hold will show on the screen.
- After 3 seconds release the Time button and the screen will show the year;





- Use the Adv/Ovr to increase (or the Boost buttons to decrease) the value and set to the correct year.
- Press the Time button once to save the year, and the screen will show the month;
- Use the Adv/Ovr or boost button to set the correct month.
- Press the Time button once to save the month, and the screen will show the day;

 


- Press the Time button once to save the day, and the screen will show the time – hour first;



Note: The hour is in 24 hour format.

- Use the Adv/Ovr or boost button to adjust to the correct hour.
- Press the Time button once to save the hour, and the minutes can be adjusted.
- Use the Adv/Ovr or boost button to adjust to the correct minutes.
- Press the Time button once to exit the Time/date entry mode.
- The display should now show the correct time/day of the week, for example;



## Modifying the date and time of day

Normally the only change required will be to the time of day minutes, in which case;

- Press and hold the Time button for 3 seconds, the word Hold will show on the screen.
- After 3 seconds release the Time button and the screen will show the year;



- Press the Time button repeatedly until the minutes are shown.
- Use Adv/Ovr or Boost to change the minutes to the correct value.
- Press the Time button once to return to operating mode.

Note: Other changes can be made the same way, but the Time button must be pressed to return to operating mode after any changes. There is no automatic exit from Time/date entry mode.

## 9. Programming ON/OFF times

The NTT06/07 has 4 independent On/Off periods available for programming each day.

For the NTT06, 24 hours is the only option, so all 7 days will be the same.

For the NTT07 there is a choice of programming options, including 7 days the same (24 hours), 5 + 2 days (where the weekdays are the same, and the two weekend days are the same), and 7 individual days.

- Press and hold the Prg button for 3 seconds, the word Hold will show on the screen.
- After 3 seconds release the Prg button and the MODE screen will be displayed;



- For the NTT07 Use the Adv/Ovr or Boost to change the day grouping mode. This will step through the following options;  
24hr – Mo Tu We Th Fr Sa Su  
5 day – Mo Tu We Th Fr (followed automatically in programming by 2 day – Sa Su)  
Individual day – Mo (followed automatically in programming by each of the other days of the week).  
Note: For the NTT06, Mo Tu We Th Fr Sa Su is the only option.
  - Once the desired day grouping is selected, press Prg button once to set and move onto programming the ON/OFF times.
  - The display will show Prog 1, with dashes for the hours and minutes;  
Note: the example shown is for 5 day + 2 day programming.
- The diagram shows a rectangular display area. At the top, there are five dashes: two on the left, a colon in the center, and two on the right. Below this, the word 'PROG' is on the left and 'ON' is on the right. At the bottom, the days of the week 'Mo Tu We Th Fr' are listed. A vertical bar is positioned under the 'Mo' day.
- Use Adv/Ovr or Boost button to set the hour for the first ON period.
  - Press the Prg button once to set and move you to the minutes.
  - Use Adv/Ovr or Boost button to set the minutes for the first ON period.
  - Press the Prg button once to set and move you to the Programme 1 OFF time.
  - Use Adv/Ovr or Boost button to set the hour for the first OFF period.
  - Press the Prg button once to set and move you to the minutes.
  - Use Adv/Ovr or Boost button to set the minutes for the first OFF period.
  - Press the Prg button to scroll through Programme 2 ON, Programme 2 OFF, Programme 3 ON, Programme 3 OFF,

Programme 4 ON and programme 4 OFF, adding in times as required.

Note: If further times are not required, just leave the dashes in place and scroll past the rest of the programs using the Prg button.

- After Programme 4 has been entered, then next day grouping will follow e.g. In this example the day grouping will change to 2 day – Sa Su Programme 1 ON.
- Programme the ON/OFF times as before.
- After the last OFF time for programme 4 has been set, press the Prg button once to exit the programme mode.

Note: At any stage in programming, if the Prg button is pressed and held for 3 seconds, the timer will return to normal operating mode.

- The display will now show the correct time and day as per this example;



- At this stage the output ON/OFF indicator (as in the above image) may not reflect the current programme status accurately.
- If the time switch should be OFF now, leave as it is.

Note: The time switch will automatically turn ON at your desired ON time, and will resume the next programme as normal.

- If the time switch should be ON now, press the Adv button once and set it too ON ADVANCE;



Note: The time switch will now automatically turn OFF at your desired OFF time, and will resume the next programme as normal.

- In the same way as for individual programmes, days or groups of days can be omitted either by leaving dashes in all the locations for ON/OFF times for that day or group of days. Alternatively, leaving the programme entry mode before filling in all the ON/OFF times will leave the remaining times blank.

**Note: The only way to re-enter a blank times (or dashes) is to reset the unit.**

### Programming across midnight

- Enter the required programme 1 ON time.
- Set the programme 1 OFF time to 00:00 (i.e. midnight).
- Set the programme 2 ON time to 00:00 as well.
- Enter the required programme 2 OFF time for the next day.

### Modifying or adding programmes

- Press and hold the Prg button for 3 seconds, the word Hold will show on the screen.
- After 3 seconds release the Prg button and the MODE screen will be displayed.

Note: This will automatically display the mode in which it was last programmed. For instance, if it was programmed in 5 + 2, then it will show Mo Tu We Th Fr.

- Either – Accept this by pressing the Prg button once, and review the programmed times for this mode by pressing Prg to move through the times.
- Or – Press the Adv/Over or Boost button to change the mode, and then press the Prg button to review the times.

Note: If you wish to change the mode at this stage, doing so will result in programmes being lost and they will need to be re-entered.

- Review times and adjust as necessary as described at the start of section 9.

## 10. Advance/Override button

In normal operating mode the Adv/Ovr button advances the programme to the next time change.

- If the output is currently OFF, it will change the output to ON ADVANCE, until the next programmed OFF time.
- If the output is currently ON, it will change the output to OFF ADVANCE, until the next programmed ON time.
- A second push of the Adv/Ovr button selects a permanent ON mode, ON OVERRIDE, where the output is ON irrespective of the programming.
- A third push of the Adv/Ovr button selects a permanent OFF mode, OFF OVERRIDE, where the output is OFF irrespective of the programming.
- A fourth push of the Adv/Ovr button returns the unit to normal operating mode, where the output will conform to the programming.

## 11. Boost button

- One press of the boost button will provide 1 hour of boost, after which the output will turn OFF.
- Two presses of the boost button will provide 2 hours of boost, after which the output will turn OFF.
- A third press of the boost button will cancel any boost period and return you to normal operating mode.

## 3 Year Guarantee

In the unlikely event of this product becoming faulty due to defective material or manufacture within 3 years of the date of purchase, please return it to your supplier in the first year with proof of purchase and it will be replaced free of charge. For the second and third years or any difficulty in the first year telephone the helpline on 020 8450 0515.

Note: A proof of purchase is required in all cases. For all eligible replacements (where agreed by Timeguard) the customer is responsible for all shipping/postage charges outside of the UK. All shipping costs are to be paid in advance before a replacement is sent out.



If you experience problems, do not immediately return the unit to the store. Telephone the Timeguard Customer Helpline;

HELPLINE  
**020 8450 0515**

or email  
[helpline@timeguard.com](mailto:helpline@timeguard.com)

Qualified Customer Support Co-ordinators will be on-line to assist in resolving your query.



A **theben** Group Company

For a product brochure please contact:

**Timeguard Limited.**  
Victory Park, 400 Edgware Road,  
London NW2 6ND  
Sales Office: 020 8452 1112  
or email [csc@timeguard.com](mailto:csc@timeguard.com)  
**[www.timeguard.com](http://www.timeguard.com)**